

# POWER QUALITY ANALYZER KEW 6315



- Simultaneous Power & Power quality measurements
- Power/ Harmonics/ Waveform/ Power quality are recorded at all CHs. (Voltage: 3ch, Current 4ch)
- Helpful support functions
   Quick Start Guide, Wiring check and Sensor detection for easy and reliable measurement

IEC 61000-4-30 Class S and the European Standard EN 50160

- Remote monitoring on PC and Android<sup>™</sup> device
   Remote checking of measurement in real-time is possible via Bluetooth<sup>®</sup> communication. Recorded data can be saved in the supplied SD card.

   EN 50160 report can be generated after measurment by PC software.
- Various Clamp Current Sensors
   Various types of clamp and flexible sensors are available: from 1000mA range up to 3000A range and Earth leakage measurements
- Energy consumption check on site
   Trend and demand graphs for easy recognition.
- TFT color display with high resolution
- IEC 61010-1 CAT № 300V / CAT 🏻 600V / CAT 🗘 1000V

# Simultaneous recording of all power and power quality with easy operation



# **Quick Start Guide**

# **Easily and securely starts recording**

One-Touch START/STOP Key for Quick Start Guide providing easy setup guides.



⊚Select a de	sirable recor	ding interval.	
1sec.	1min.	1hour	
2sec.	2min.	2hours	
5sec.	5min.		
10sec.	10min.		
15sec.	15min.		
20sec.	20min.		
30sec.	30min.	150/180Cycle	
0 2 3 8 5 6 7 8 9 9			



**Guide start** 

①Select desirable recording item.
All (Power + Quality + Harmonics)

Power + Quality

Power + Harmonics

Connect to the circuit

Wring check

Select interval

Set recording time

**Start recording** 


## W/Wh

# Power & Energy

### Instantaneous value

DC1	:	0	mV DC2:	0 m	00:38 /lmin
PF	:	0.788	An:	4974 m	Min
Q	:	44.8			147
Q	:	4.5	kvar		Max
	:	44.8	kw f:	60.01	Hz Avq
PF	ŧ	0.812	0.809	0.792	Inst
S	:	11.6	11.8	11.4 k	
Q	ŧ	1.2	1.0		var
	:	11.5	11.9	11.5 k	W
A	:	48.1	48.3	47.9	
٧	:	239.9	246.3	236.6	V
		Ich	2ch	3ch	


VI INST	P INST
242.3 v	44.8kW
V2 INST	S INST
246.6 v	44.7 <sub>kVA</sub>
V3 INST	Q INST
236.8 v	4.2 <sub>kva</sub>
f INST	PF INST
59.99 нz	792

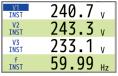


List

Zoom(8-split)


Zoom(4-split)

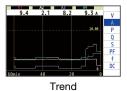

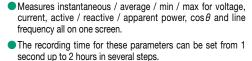

Trend of all main parameters and customized Zoom functions.
 Function to define size of capacitor banks of PF correction unit.

Integration value

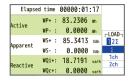


- The display will list the active / reactive / apparent energy in total and for each phase consumed (or generated in case of co-generation like solar panels, etc).
- The elapsed time is also shown on the same display screen.

### Demand

Time left	00:29:28		
DEM Target	4.000	kW	
DEM Guess	3.918	kW	Meas.
DEM Present	0.069	kW	
DEM Max	0.069	kW	
	2013/10/24 18:30:32		



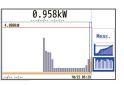


Measurement


Change in specific period


Demand change

To support demand control, present energy usage and estimated value are displayed on a graph while recording max demand value and the occurred time.

# Vector and Wiring check

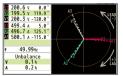

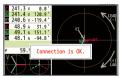

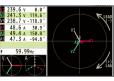

Vector


Wiring check

Ideal vector

- Can display voltage and current by vector per CH and also unbalance ratio.
- Wiring check function confirms connection and displays ideal vector (at the lower left corner) according to the selected wiring system, and shows connection errors.

# PRINT Print Screen

 This function takes a color photo of the display screen and saves it as BMP file. Useful for report creation.

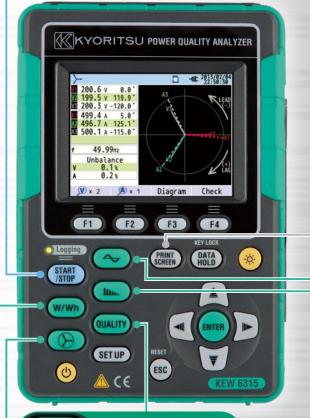

# **QUALITY** Power Quality

### **Event**


A	ll event	ts	Occurrence		
4	101.0	V	2013/07/18	18:45:43.136	
	50.4	٧	2013/07/18	10:45:43.136	
ķ.	87.1	V	2013/07/18	10:45:35.136	
	128.5	٧	2013/07/18	10:45:27.136	
	-217.1	V	2013/07/18	10:45:27.136	
4	50.4	٧	2013/07/18	10:45:18.136	
5	87.1	V	2013/07/18	10:45:10.136	
	128.5	٧	2013/07/18	10:45:02.136	

Measures voltage swells / dips / interruptions / transients and inrush currents that may indicate a weak power distribution system. Such phenomena may damage or reset devices. KEW 6315 can catch swells / dips / interruptions and inrush currents based on half cycle (10 ms @ 50Hz or 8.3ms @ 60Hz) True RMS. All necessary data is displayed by pressing one key.

### Swell

Swell is an instantaneous voltage increase, most of the time

originated by upstream power line failure or switching OFF large load or switching ON large capacitor.

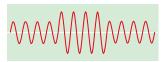

# POWER QUALITY ANALYZER K

## Software "KEW Windows for KEW 6315" for data analysis and setting via USB port

- Automatic creation of graph and list from recorded data.
- Centralized management of setting and recorded data acquired from multiple devices.
- Data can be expressed in crude oil and CO<sub>2</sub> equivalent values in the report.

Please download the software from our website. ¾Windows<sup>®</sup> is a trademark or registered trademark of Microsoft Corporation.




	1 1		-	_	-	-
OR LABOR.	10.00	SHALM				
-		delle				
Contract Con	(A)					-
EE . EE						
WHEN THE PARTY OF	2			-		
1964 1964 C	200	Diame.	_			
***	100	11/2/2		$\sim$	-	mark.
No. 1854	=					
1014						
10.1	41					
10.2	71					
*****	12					
THE PERSON NAMED IN		1166	No. of Lot	10 10	120110	1001100
		246	1891 1881		130-110	23
of States Street			Colon Colon -			1461 125
100			199 1991	200 1,100	1201 1100	
	1000		UNIL LINK			1105.346

### Real-time and remote measurements.



Measurements can be graphically displayed on Android™ devices or PC in realtime via Bluetooth®

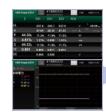







# Waveform



- Displays voltage and current on each Ch by waveform.
- Scales of voltage/current axis and time axis are selectable, and also full-scale function for automatic scaling is available.

## **USB Terminal**

### **Digital Output Terminal**

Open Collector Output (1ch)


## Analog Input Terminal

2ch DC100mV / 1000mV, 10V. To record additional parameters (e.g. Lux, Temperature, Humidity, etc.)

# Harmonics Analysis



Graph

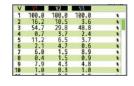

List

- Graphic display of harmonic components up to 50th order for voltage, current and power in total and for
- List display of harmonic content, RMS value and phase angle of each order.
- Can analyze harmonic currents that may contribute to damage capacitor banks for PF correction, overheating transformers / neutral conductors / cables, unwanted tripping of breakers.

### SD card Interface

SD cards up to 2GB can be used

Possible recording time When the 2GB of SD is used

Interval	REC item		
interval	Power	+Harmonics	7
1sec.	13days	3days	
1min.	1year or more	3months	
30min.	10year or more	7year or more	

Data of power quality events are not considered to estimate the possible recording time. The max possible time will be shortened by recording such events.

Dip, as the opposite of a swell, is an instantaneous voltage decrease, most of the time caused by switching ON large load e.g. motors or by downstream power line failure.

### Interruption

Interruption is a power line cut-off from any source of supply. It can be caused by a fault in a power line, which causes switch gear to open.

### Transients/Over Voltage (Impulse)

Transient is a very fast and momentary voltage increase that can seriously damage devices connected to a power line. It may be caused by electrical switching events such as unstable contacts of relays, tripping of breakers but also by lightening. KEW 6315 can catch Transients from 24 us.


### Inrush Current

Inrush current is a surge current that happens when motors, large or low impedance loads are switched ON. Then the current will stabilize as soon as the load has reached normal working conditions.








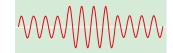

### Flicker

### Designed to meet IEC 61000-4-15

Flicker is a phenomenon giving an impression of unsteadiness of visual sensation induced by periodic voltage changes caused by fluctuating loads when using: arc furnace, spot welder, crane, excavator, etc.

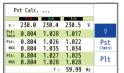

Trend graph

Displays Pst (1min.) on a trend graph.

### **Optional Accessories**

### Load current clamp sensors

### MODEL 8128 MODEL 8127 MODEL 8126 MODEL 8125 MODEL 8124















### Leakage & Load current clamp sensors

#### **KEW 8146 KEW 8147 KEW 8148**





### **Power supply** adapter







### Load current flexible clamp sensors



Before connecting with the sensors KEW 8133 or KEW 8135, confirm that the internal firmware version is later than the one listed in the table below.

MODEL	Firmware version
KEW 8133	V1.50 or later
KEW 8135	V3.00 or later

The latest firmware is available on our website.

### Distribution board door can be closed during measurement?

KEW 6315 facilitates safe testing thanks to its extreme compact design and with two attractive optional accessories: a carrying case with magnet (9132) for attaching it to the sides of metal enclosures and a power supply adapter (8312) which takes the power for the instrument from the supply being measured.

### **Specification**

Wiring conne	ections	1P2W, 1P3W, 3P3V	W, 3P4W			
Measuremer parameters	nts and	Voltage, Current, Frequency, Active power, Reactive power, Apparent power, Active energy, Reactive energy, Apparent energy, Power factor (cose), Neutral current, Demand, Harmonics, Quality (Swell/Dip/Interruption, Transients/Over voltage, Inrush current, Unbalance rate), Capacitance calculation for PF correction unit, Flicker				
Voltage (RM	S)					
Range		600.0/1000V				
Accuracy	,	600.0V Range: (sine wave 40 to 70Hz) 10% to 150% against 100V or more of nominal V: Nominal V±0.5% Out of above range: ±0.2%rdg±0.2%f.s. 1000V Range: ±0.2%rdg±0.2%f.s.(sine wave 40 to 70Hz)				
Allowable	input	1 to 120% of each	range (rms). 200% o	f each range (peak)		
Display ra	ange	0.15 to 130% of each range				
Crest fact	tor	3 or less				
Sampling Voltage tr	speed of ansient	24µs				
Current (RM	S)					
Range		8128 8127 8126 8125 8124 8146/8147/8148 8130 8133 8135	(50A type) (100A type) (200A type) (500A type) (1000A type) (100A type) (1000A type) (3000A type) (50A type)	5000mA/50.00A/AUTO 10.00/100.0A/AUTO 20.00/200.0A/AUTO 50.00/500.0A/AUTO 100.0/1000A/AUTO 100.0/1000A/AUTO 100.0/1000A/AUTO 300.0/3000A/AUTO 5000mA/50.00A/AUTO		
Accuracy		±0.2%rdg±0.2%f.s	.+accuracy of clamp	sensor (sine wave, 40 to 70Hz)		
Allowable	input	1 to 110% of each	range (rms). 200% o	f each range (peak)		
Display ra	ange	0.15 to 130% of ea	ch range			
Crest fact	tor	3 or less				

Active power			
Accuracy	±0.3%rdg±0.2%f.s. + accuracy of clamp sensor (power factor 1, sine wave, 40 to 70Hz)		
Influence of power factor	±1.0%rdg (reading at power factor 0.5 against power factor 1)		
Frequency meter range	40 to 70Hz		
Power source (AC Line)	100 to 240V / 45 to 65Hz / 7VA max		
Power source (DC battery)	Alkaline size AA battery LR6 or Ni-MH (HR15-51)×6 Battery life approx. 3 h (LR6, Backlight OFF)		
Internal memory	FLASH memory (4MB)		
PC card interface	SD card (2GB)		
Communication interface	USB, Bluetooth®5.0 <sup>*1</sup>		
Display	320×240(RGB)Pixel, 3.5inch color TFT display		
Display update period	1 sec.		
Temperature and humidity range	23±5°C, relative humidity 85% or less(no condensation)		
Operating temperature and humidity range	0 to 45°C, relative humidity 85% or less(no condensation)		
Storage temperature and humidity range	-20 to 60°C. relative humidity 85% or less(no condensation)		
Applicable standards  Dimension / Weight	EC 61010-1		
Accessories			
Accessories 7141B (Voltage test lead set), 7170(Power cord(EUI)) or 7240(Power c 7219 (USB cable),8326-02(SD card [2GB]), 9125 (Carrying case for KEW 6315, KEW 6315-01) 9135 (Carrying case for KEW 6315-03, KEW 6315-04, KEW 6315 lnput terminal platex-6, Quick manual, Batteries			
Optional accessories	8124, 8125, 8126, 8127, 8128 (Load current clamp sensor), 8130, 8133, 8135/Flexible clamp sensor), 8146, 8147, 8148(Leakage and Load current clamp sensor), 8312 (Power supply adapter), 9132 (Carrying case with magnet)		

<sup>\*1</sup> Some countries regulate the compliance with their Radio Law of the products equipped with Bluetooth<sup>®</sup>.

\*1 Some countries regulate the compliance with their Radio Law of the products equipped with Bluetooth<sup>®</sup>.

\*Please confirm it with your distributor before purchasing our products equipped with Bluetooth<sup>®</sup>.

\*Bluetooth is a trademark or registered trademark of Bluetooth SIG, Inc.

\*Android™ is a trademark or registered trademarks of Google LLC.



Please read the "Safety Warnings" in the instruction manual supplied with the instrument thoroughly and completely for correct use. Failure to follow the safety rules can cause fire, trouble, electrical shock, etc. Therefore, make sure to operate the instrument on a correct power supply and voltage rating marked on each instrument.

For inquiries or orders :



### KYORITSU ELECTRICAL **INSTRUMENTS** WORKS, LTD.

2-5-20, Nakane, Meguro-ku, Tokyo, 152-0031 Japan Phone:+81-3-3723-0131 Fax:+81-3-3723-0152

www.kew-ltd.co.jp

