


INSTRUCTION MANUAL

DIGITAL CLAMP METER

KEW2007R

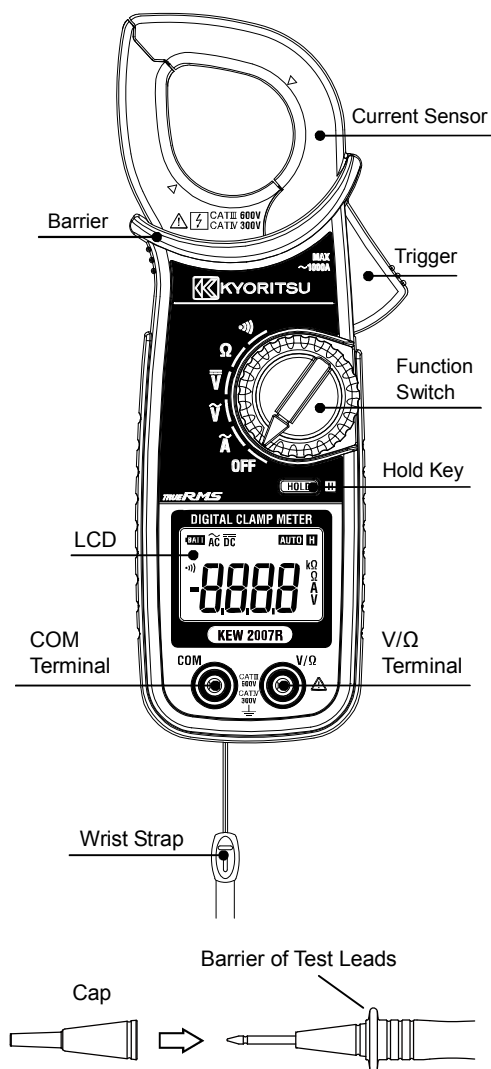

**KYORITSU ELECTRICAL
INSTRUMENTS WORKS, LTD.**

1. Safety Warnings

This instrument has been designed, manufactured and tested according to IEC 61010: Safety requirements for Electronic measuring apparatus, and delivered in the best condition after passed the inspection. This instruction manual contains warnings and safety rules which must be observed by the user to ensure safe operation of the instrument and retain it in safe condition. Therefore, read through these operating instructions before using the instrument.

⚠ WARNING

- Read through and understand the instructions contained in this manual before using the instrument.
- Keep the manual at hand to enable quick reference whenever necessary.
- The instrument is to be used only in its intended applications.
- Understand and follow all the safety instructions contained in the manual.
- It is essential that the above instructions are adhered to. Failure to follow the above instructions may impair the protection provided by the instrument and test leads, and may cause injury, instrument damage and/or damage to equipment under test.

The symbol ⚠ indicated on the instrument means that the user must refer to the related parts in the manual for safe operation of the instrument. It is essential to read the instructions wherever the symbol ⚠ appears in the manual.

- ⚠ DANGER is reserved for conditions and actions that are likely to cause serious or fatal injury.
- ⚠ WARNING is reserved for conditions and actions that can cause serious or fatal injury.
- ⚠ CAUTION is reserved for conditions and actions that can cause injury or instrument damage.

- Marks listed below are used on this instrument.

- ⚠ User must refer to the manual.
- ☐ Instrument with double or reinforced insulation
- ⚡ Indicates that this instrument can clamp on bare conductors when measuring a voltage corresponding to the applicable measurement category, which is marked next to this symbol.
- ~ AC = DC ⊥ Ground (Earth)
- ⚡ This instrument is subject to WEEE Directive (2002/96/EC). Please contact our dealer near you at disposal.

Measurement Category


○ Circuits which are not directly connected to the mains power supply.

CAT II Primary electrical circuits of equipment connected to an AC electrical outlet by a power cord.

CAT III Primary electrical circuits of the equipment connected directly to the distribution panel, and feeders from the distribution panel to outlets.

CAT IV The circuit from the service drop to the service entrance, and to the power meter and primary over current protection device(distribution panel).

This instrument is designed for CAT IV 300V / CAT III 600V. Test leads M-7066A with the supplied cap are designed for CAT IV 600V / CAT III 1000V and without the caps are for CAT II 1000V.

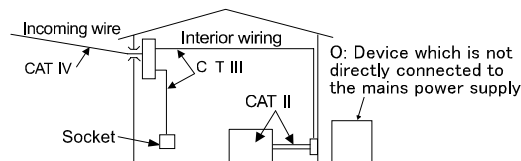

⚠ DANGER

- Never make measurements under the circumstances exceed the designed measurement category and the rated voltage of the instrument and the test leads.
- Do not attempt to make measurement in the presence of flammable gasses. Otherwise, the use of the instrument may cause sparking, which can lead to an explosion.
- Never attempt to use the instrument if its surface or your hand is wet.
- Do not exceed the maximum allowable input of any measuring range.
- Never open the Battery cover during a measurement.
- To avoid electrical shock by touching the equipment under test or its surroundings, be sure to wear insulated protective gear.
- Never measure current while the test leads are inserted into the input terminals.
- Test leads to be used for voltage measurements shall be rated as appropriate for Measurement Category III or IV according to IEC 61010-031 and shall have a voltage rating of 600V or higher.
- Barriers on the instrument body and the test leads provide protection to keep your fingers and hands from touching an object under test. Keep your fingers and hands behind the barriers during measurement.

⚠ WARNING

- Never attempt to make measurement if any abnormal conditions, such as broken case and exposed metal parts are found on the instrument or test leads.
- Verify proper operation on a known source before use or take action as a result of the indication of the instrument.
- **Firmly attach the caps to the test leads when performing measurements in CAT III or higher test environments. When Kew2007R and the test leads are combined and used together, whichever is lower category & voltage to earth either of them belong to is applied.**
- Do not rotate the Function Switch if the instrument and the equipment under test are connected.
- Do not install substitute parts or make any modification to the instrument. For repair or re-calibration, return the instrument to your local KYORITSU distributor

⚠ CAUTION

- Use of this instrument is limited to domestic, commercial and light industry applications. Strong electromagnetic interference or strong magnetic fields, generated by large currents, may cause malfunction of the instrument.
- Connect the test leads to the terminals firmly.
- This instrument isn't water proofed. Keep away from water.
- Do not pull or twist the test leads to prevent the risk of damage.
- Power off the instrument after use. Remove batteries if the instrument is to be stored and will not be in use for a long period.
- Do not expose the instrument to the direct sunlight, high temperature and humidity or dewfall.
- Use a cloth dipped in water or neutral detergent for cleaning the instrument. Do not use abrasives or solvents.

NOTE

- The LCD shows some digits at the ACV and the DCV ranges even while the test leads are open. In addition, the LCD shows some digits instead of 0 when short-circuiting the test leads. However, these phenomena don't affect measurement results.

2. Specification

Temperature: 23 ± 5°C, Humidity: 45 - 75%

ACA		(Auto-range)
Range	Display Range	Accuracy (sine wave)*1
600A	0.0, 0.4-629.9A	±1.5 %rdg±4dgt (45-65Hz)
1000A	570-1049A	±2.0 %rdg±4dgt (40-400Hz)

*1 : when the measured conductor is in the center of clamp jaw
Guaranteed accuracy : 0.8A -1000A, less than 1500A Peak
Input protective current : AC1200A

ACV		(Auto-range)
Range	Display Range	Accuracy (sine wave)
600V	0.0, 0.6-629.9V	±1.2 %rdg±3dgt (45-65Hz) ±1.5 %rdg±4dgt (40-400Hz)

Guaranteed accuracy : 1.0V - 600.0V, less than 900V Peak
Input protective voltage : AC/DC720V 10 sec

DCV		(Auto-range)
Range	Display Range	Accuracy
600V	0.0-±629.9V	±1.2%rdg±3dgt

Guaranteed accuracy : 0.0V - ± 600.0V
Input protective voltage : AC/DC720V 10 sec
ACV/DCV input impedance : approx. 10MΩ

Resistance / Continuity		(Auto-range)
Range	Display Range	Accuracy
600Ω	0.0-629.9 Ω	±1.3%rdg±5dgt
6kΩ	0.570-6.299 kΩ	±2.0%rdg±3dgt
Cont.	0.0-629.9 Ω	Bz threshold value <90Ω

Guaranteed accuracy : 0.0Ω - 6.000kΩ
Open-loop voltage : 3V or less
Input protective voltage : AC/DC600V 10 sec

- Measuring method : ΔΣ modulation
- Over-range indication : OL
- Measurement cycle : 2.5 times per second
- Crest factor : less than 3 (45-65Hz)
Add ±0.5%rdg±5dgt to above specified accuracies.
(Applicable functions : ACA, ACV)
- Applicable Standards :
IEC 61010-1/ 61010-2-032/ 61010-2-033 (instrument)
Pollution degree 2, Indoor use, Altitude up to 2000m
CAT III 600V / CAT IV 300V
IEC 61010-031 (Test leads Model 7066A)
w/ caps CAT IV 600V / CAT III 1000V
w/o caps CAT II 1000V
IEC61326 (EMC), EN50581 (RoHS)
- Withstand voltage : AC5160Vrms 5sec
between current sensor and enclosure or
circuit and enclosure
- IP rating : IP40 (IEC60529)
- Insulation resistance :
>100MΩ /1000V between enclosure and electrical circuit

- Operating Temperature and humidity range :
0 to 40°C 85%RH or less (no condensation)
- Storage Temperature and humidity range :
-20 to 60°C 85%RH or less (no condensation)
- Power source : DC3V R03 / LR03 (AAA) ×2
- Current consumption : < 4mA
- Battery life (ACA, continuous, no load, with R03) :
approx. 170 hours
- Dimension, Weight : 204(L)×81(W)×36(D)mm,
approx. 220g (including batteries)


- Accessories :
Test leads Model 7066A 1set
Battery R03(AAA) 2pcs
Instruction manual 1pce
Carrying case Model 9079 1pce

3. ACA Measurement

⚠ DANGER

- Disconnect the test leads from the instrument when performing a test.
- Do not exceed the rated voltage (600V) and the category ratings of the instrument.
- Keep your fingers and hands behind the barrier during measurement.

- (1) Set the Function switch to ACA position.
- (2) Press the trigger to open the Current Sensor and clamp the one conductor (Dia. 33mm max.) under test.

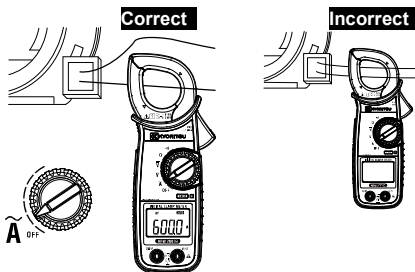

NOTE


Measurement accuracy is guaranteed when the measured object is placed at the center of the Current Sensor.

4. ACV/DCV Measurement

⚠ DANGER

- Before starting a measurement, ensure that the Function switch is set to the appropriate position.
- Do not exceed the rated voltage (600V) and the category ratings of the instrument.
- Keep your fingers and hands behind the barrier during measurement.

- (1) Set the Function switch to ACV or DCV position.
- (2) Firmly connect the test leads to V/Ω and COM terminals.

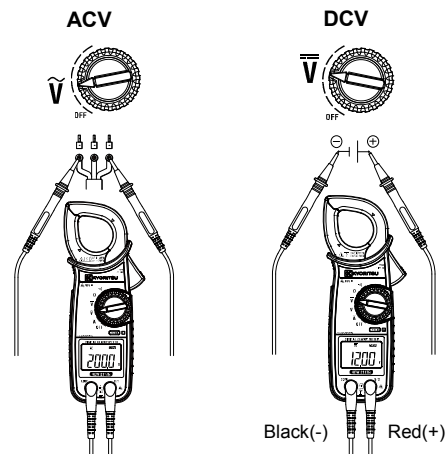

NOTE

If the connection is reversed, the LCD indicates the "—" mark (DCV measurement).


5. Resistance(Continuity) Measurement

⚠ WARNING


Power off the circuit under test before making measurements with this instrument.

- (1) Set the Function switch to resistance or continuity position.
- (2) Firmly connect the test leads to V/Ω and COM terminals.

Resistance

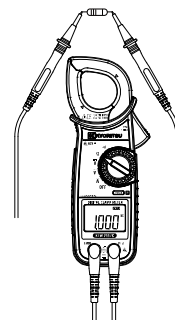

Continuity

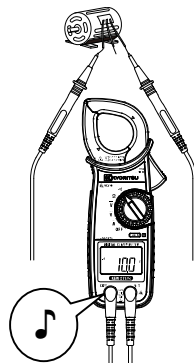

Beeps less than 90Ω.

NOTE

LCD indicates "OL" when the test leads are open.

6. Other Functions

- Data Hold **HOLD**
Press the Hold key. The LCD shows "H" mark and the reading will be held.
Press the Data Hold Key again to release the display.



- Low battery indication
The LCD shows "BATT" mark when the batteries fall below the normal operating voltage.

Replace the batteries with new ones when this mark appears.



- Sleep Function
Automatically powers off the instrument in about 10 min after the last switch or key operation. Buzzer beeps five times one minute before entering into the Sleep mode, and also one time just before entering into the mode. To exit from the Sleep mode, rotate the Function switch or press Hold key.

To disable the Sleep function, press the HOLD key and power on the instrument.
Confirm that the LCD shows "POFF" about 1 sec.



7. Battery Replacement


⚠ WARNING

- Replace the batteries when a Low Battery Voltage warning "BATT" mark is indicated on the LCD. Otherwise, precise measurement cannot be made.
If batteries are completely exhausted, the LCD goes blank without showing "BATT" mark.
- Do not try to replace the batteries if the surface of the instrument is wet.
- Disconnect the test leads from the object under test and power off the instrument before opening the Battery Compartment Cover for battery replacement.

⚠ CAUTION

- Do not mix old and new batteries. Brand and type of the batteries to be used should be harmonized.
- Install batteries in correct polarity as indicated in the Battery Compartment.


- (1) Set the Function Switch to "OFF" position.
- (2) Unscrew and remove the Battery Compartment Cover on the instrument.
- (3) Replace the batteries observing correct polarity. Use new two AAA 1.5V batteries.
- (4) Install the Battery Compartment Cover and tighten the screw.

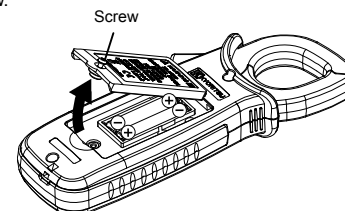

MEMO

DISTRIBUTOR

 Kyoritsu reserves the rights to change specifications or designs described in this manual without notice and without obligations.



KYORITSU ELECTRICAL INSTRUMENTS WORKS, LTD.

2-5-20, Nakane, Meguro-ku,
Tokyo, 152-0031 Japan
Phone: +81-3-3723-0131
Fax: +81-3-3723-0152
Factory: Ehime, Japan

www.kew-ltd.co.jp