


*T1, T2, T1-T2, two displays, type K/J*

# TWO CHANNEL THERMOMETER

**Model : TM-925**

**ISO-9001, CE, IEC1010**

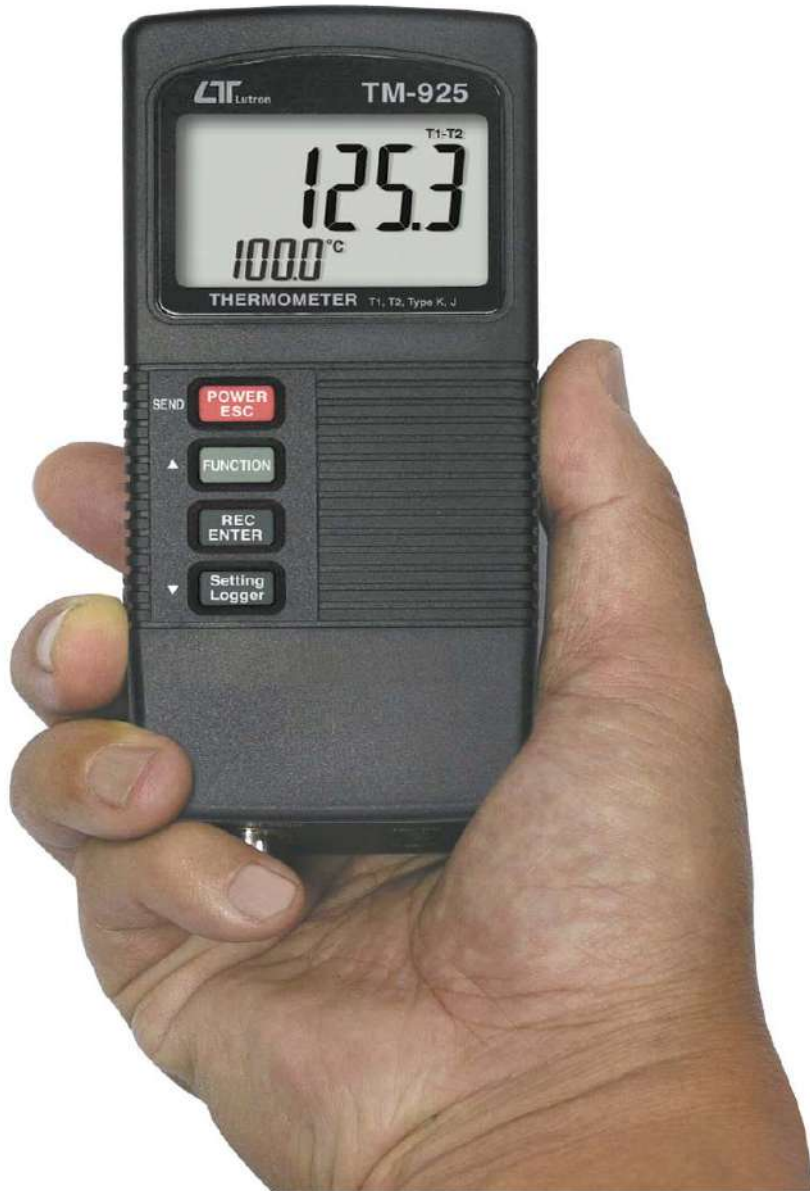

## FEATURES

- \* T1, T2, T1-T2, Type K/J.
- \* °C/°F, 0.1 degree/1 degree.
- \* Type K : -100 to 1300 °C.
- \* Type J : -100 to 1200 °C.
- \* Data hold, Record ( max., min. ).
- \* RS-232 interface, data logger.
- \* DC 9V battery ( 006P ) or DC 9V adapter in.



**Lutron**

**LUTRON ELECTRONIC**

***The Art of Measurement***

*T1, T2, T1-T2, two display*

# TWO CHANNEL THERMOMETER

Model : TM-925

## FEATURES

* Two channels thermometer, T1, T2, T1-T2, T1 only.
* Both type K/J temp. measurement, wide range.
* °C/°F, 0.1 degree.
* Microcomputer circuit provides intelligent function and high accuracy.
* LCD with two display, easy readout.
* Manual and auto data logger, with flexible sampling time selection, can save max. 1,600 reading data.
* Records Maximum and Minimum readings with recall.
* Data hold function for freezing the desired value.
* It can default to accept type K or type J Temp. probe.
* It can default auto power off or manual power off.
* It can default the measuring unit to °C or °F.
* Build in the input socket for DC 9V power adapter.
* RS232 PC serial interface.
* Few panel buttons, easy operation.
* Built-in low battery indicator.
* Heavy duty & compact housing case.

## GENERAL SPECIFICATIONS

Circuit	Custom one-chip of microprocessor LSI circuit.	
Display	LCD size : 44 mm x 29 mm dual function LCD display.	
Display Unit	°C, °F.	
Resolution	0.1 °C, 0.1 °F.	
Channels	T1, T2, T1-T2, T1 only.	
Thermocouple type	Type K or Type J.	
Sampling Time of Data Logger	Manual	Push the data logger button once will save data one time. <i>* Set the sampling to 0 second.</i>
	Auto	1, 2, 5, 10, 30, 60, 600, 1800, 3600 seconds.
Data Logger number	Max. 1,600-point Data logger	
Temperature Compensation	Automatic temp. compensation for the cold junction both type K/J thermometer	
Linear Compensation	Linear Compensation for the full range.	
Offset, Span Adjustment	Available for advanced calibration procedure.	
Probe Input Socket	Standard 2 pin thermocouple socket.	

Over Indication	Show " - - - - - ".
Data Hold	Freeze the display reading.
Memory Recall	Maximum & Minimum value.
Sampling Time of display	Approx. 1 second.
Power off	Auto shut off saves battery life or manual off by push button.
Data Output	RS 232 PC serial interface.
Operating Temperature	0 to 50 °C.
Operating Humidity	Less than 80% R.H.
Power Supply	006P DC 9V battery ( Alkaline or Heavy duty type ).
	DC 9V adapter input. <i>* AC/DC power adapter is optional.</i>
Power Current	Approx. DC 5.5 mA
Weight	196 g/0.43 LB.
Dimension	135x60x33 mm, ( 5.3x2.4x1.3 inch ).
Accessories Included	Instruction manual..... 1 PC
Optional Accessories	* Type K thermocouple probe. TP-01, TP-02A, TP-03, TP-04 * AC to DC 9V adapter. * RS232 cable, UPCB-02. * USB cable, USB-01 * Data Acquisition software, SW-U801-WIN. * Data Logger software, SW-DL2005. * Carrying case, CA-52A.

## ELECTRICAL SPECIFICATIONS (23± 5 °C)

Sensor Type	Reso- lution	Range	Accuracy
Type K	0.1 °C	-50.0 to 1300.0 °C	± ( 0.4 % + 0.8 °C )
		-50.1 to -199.9 °C	± ( 0.4 % + 1 °C )
	0.1 °F	-58.0 to 2372.0 °F	± ( 0.4 % + 1.5 °F )
		-58.1 to -327.8 °F	± ( 0.4 % + 1.8 °F )
Type J	0.1 °C	-50.0 to 1100.0 °C	± ( 0.4 % + 0.8 °C )
		-50.1 to -199.9 °C	± ( 0.4 % + 1 °C )
	0.1 °F	-58.0 to 2012.0 °F	± ( 0.4 % + 1.5 °F )
		-58.1 to -327.8 °F	± ( 0.4 % + 1.8 °F )

\* Accuracy value is specified for the meter only.  
\* Type K probe TP-01 TP-02A, TP-03. TP-04 is the optional type K Temp. probe.

\* Appearance and specifications listed in this brochure are subject to change without notice.